



Portal > Knowledgebase > Other Software > Mill Wizard tool path is grayed out?

Mill Wizard tool path is grayed out?

Imported User 6 - 2019-04-29 - in Other Software

The PC requirements for the Mill Wizard are as follows:

Laptop or Desktop

- Windows XP, Windows Vista, Windows 7, Windows 8 (Must be run as admin in order to work properly)
- 2Ghz CPU
- 1GB RAM
- Video Card with 256MB RAM and OpenGL3.0 or higher

If you are running a lower version number of OpenGL3.0 the tool path will not work and will grey out.