

PCI lpt port controller drivers

- Go to device manager
 - o Select PCI simple communications controller
 - o Right click and select update driver
 - o De-select find best driver and locate manually
- Browse CD
 - o Multi I/O
 - o 220N-2
 - o XP folder
 - o “Netmos 9815 PCI Multi I/O controller” loads
- 2 new devices will appear under LPT ports
 - o load each the same as above

- Netmos 9815 PCI Multi I/O controller should appear where PCI simple communications controller was earlier

- Netmos PCI ECP parallel port LPT(2) and (3) should also appear